

器具形名	バッテリー形名
KSD4012A	蛍7N23AA 3N25DA
KSD4021	蛍7N23AA 3N25DA
KSD4021A	蛍7N23AA 3N25DA
KSD4022	蛍7N23AA 3N25DA
KSD4022A	蛍7N23AA 3N25DA
KSD41072	蛍9N20AA 4N20DA
KSD41092	蛍9N20AA 4N20DA
KSD42112	蛍7N23AA 4N20DA
KSD42122	蛍7N23AA 4N20DA
KSD42132	蛍7N23AA 4N20DA
KSD42142	蛍7N23AA 4N20DA
KSD4712	蛍4N12DE 3N25DA
KSD4712MS	蛍4N12DE 3N25DA
KSD4712S	蛍4N12DE 3N25DA
KSD4732	蛍4N12DE 3N25DA
KSD4732MS	蛍4N12DE 3N25DA
KSD4732S	蛍4N12DE 3N25DA
KSD4752	蛍4N12DD 3N25DA
KSD4752MS	蛍4N12DD 3N25DA
KSD4752S	蛍4N12DD 3N25DA
KSD4851A	蛍4NR-AC-TL 3NR-CX-S
KSD4851HA	蛍4NR-CX-S 3NR-CX-S×2
KSD4851VA	蛍4NR-AC-TL 3NR-CX-S 音3NR-CX-S
KSD4851VHA	蛍4NR-CX-S 3NR-CX-S×2 5NR-CX-S
KSD4862A	蛍4NR-AC-TL 3NR-CX-S
KSD4862HA	蛍4NR-CX-S 3NR-CX-S×2
KSD4862VA	蛍4NR-AC-TL 3NR-CX-S 音3NR-CX-S
KSD4862VHA	蛍4NR-CX-S 3NR-CX-S×2 6NR-CX-S
KSD9001H	3N40HA
KSD9011H	3N40HA 音12N05DA
KSH0651	3N12AB
KSH1041	3N12AB
KSH1041A	2N20DA
KSH1051	3N12DA
KSH1061	3N12DA
KSH1071	2N20DA
KSH1081	2N20DA
KSH1211	3N12AB
KSH1211C	3N12AB
KSH1211S	3N12AB
KSH1221	3N12AB
KSH1221C	3N12AB
KSH1221S	3N12AB
KSH1251	2N20DA
KSH1261	2N20DA
KSH1271	2N20DA
KSH1281	2N20DA
KSH1291	2N20DA
KSH1311	2N20DA
KSH1411	FK177A
KSH1431	FK172
KSH1431M	FK172
KSH1511	FK127A
KSH1531	FK127A
KSH1551	FK177A

器具形名	バッテリー形名
KSH1571	2N20HA
KSH1571A	2N20HA
KSH1581	2N20HA
KSH1581A	2N20HA
KSH1611	FK122
KSH1631	FK122
KSH1701	2N06DA
KSH1731	2N06DA
KSH1761M	FK125
KSH1831	4NR-AC-TL
KSH1831A	4NR-AC-TL
KSH1842	4NR-AC-TL
KSH1842A	4NR-AC-TL
KSH1851	4NR-AC-TL
KSH1851A	4NR-AC-TL
KSH1851HA	4NR-CX-S
KSH1862	4NR-AC-TL
KSH1862A	4NR-AC-TL
KSH1862HA	4NR-CX-S
KSH1931	4N06DB
KSH1942	4N06DB
KSH20011	4N40DB
KSH20011A	4N40DB
KSH20011B	4N40DB
KSH20021	4N40DB
KSH20021A	4N40DB
KSH20021B	4N40DB
KSH2071	4N19DA
KSH2081	4N19DA
KSH21011	蛍4N19DA 4N20DA 音12N05DA
KSH21011A	蛍3N23DA 3N25DA 音12N05DA
KSH21021	蛍4N19DA 4N20DA 音12N05DA
KSH21021A	蛍3N23DA 3N25DA 音12N05DA
KSH2111	4N19DA
KSH2131	4N19DA
KSH2131A	4N19DA
KSH2141	4N19DA
KSH2141A	4N19DA
KSH2151	3N23DA
KSH2161	3N23DA
KSH22011	4N19DA
KSH22021	4N19DA
KSH2211	4N19HA
KSH2211C	4N19HA
KSH2211S	4N19HA
KSH2221	4N19HA
KSH2221C	4N19HA
KSH2221S	4N19HA
KSH2251	3N23DA
KSH2261	3N23DA
KSH2271	3N23DA
KSH2281	3N23DA
KSH2291	3N23DA
KSH2411	FK627A
KSH2511	FK627A

器具形名	バッテリー形名
KSH2531	FK627A
KSH2551	FK627A
KSH2571	3N23HA
KSH2571A	3N23HA
KSH2581	3N23HA
KSH2581A	3N23HA
KSH2611	4N06DB
KSH2622	4N12DE
KSH2631	4N06DB
KSH2642	4N12DE
KSH2651	4N06DA
KSH2711	4N06DB
KSH2711M	4N06DB
KSH2722M	4N12DE
KSH2731	4N06DA
KSH2731M	4N06DA
KSH2742	4N12DD
KSH2742M	4N12DD
KSH2751	4N06DA
KSH2751H	4N12DD
KSH2751M	4N06DA
KSH2762	4N12DD
KSH2762H	4N25HA
KSH2762M	4N12DD
KSH2771	蛍4N06DA 3N25DA 音12N05DA
KSH2771M	蛍4N06DA 3N25DA 音12N05DA
KSH2831A	4NR-AC-TL
KSH2842A	4NR-AC-TL
KSH2851	4NR-AC-TL
KSH2851A	4NR-AC-TL
KSH2851HA	4NR-CX-S
KSH2862	4NR-AC-TL
KSH2862A	4NR-AC-TL
KSH2862HA	4NR-CX-S
KSH2931	4N06DB
KSH2942	4N06DB
KSH3031	9N19AA
KSH3041	9N19AA
KSH3051	6N23AA
KSH3051A	6N23AA
KSH3061	6N23AA
KSH3061A	6N23AA
KSH3211	9N19AB
KSH3211C	9N19AB
KSH3211S	9N19AB
KSH3221	9N19AB
KSH3221C	9N19AB
KSH3221S	9N19AB
KSH3251	6N23AA
KSH3261	6N23AA
KSH3271	6N23AA
KSH3281	6N23AA
KSH3291	6N23AA
KSH40011	9N40AA
KSH40012	9N40AA