

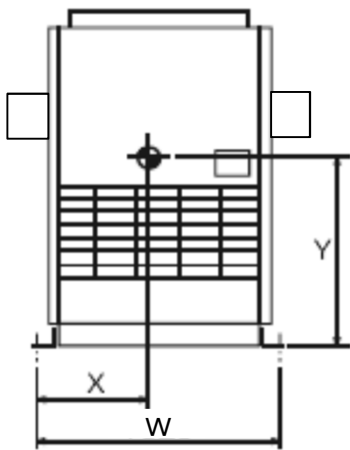




重心位置計算書
遠方操作キット組込

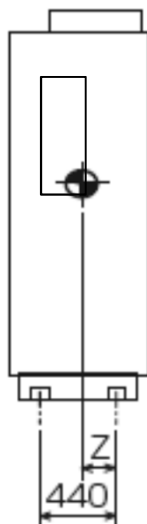

形名	箱方向	W	X	Y	Z	質量
PFAV-P80DMJ1	右取付	806	436	950	125	124
	左取付	806	411	950	125	124
PFAV-P140DMJ1	右取付	806	439	940	123	126
	左取付	806	416	940	123	126
PFAV-P224DMJ1	右取付	1026	555	932	120	139
	左取付	1026	528	932	120	139
PFAV-P280DMJ1	右取付	1026	551	927	121	143
	左取付	1026	525	927	121	143
PFAV-P167DMJ1-F	右取付	806	439	934	126	126
	左取付	806	416	934	126	126
PFAV-P265DMJ1-F	右取付	1026	554	925	122	141
	左取付	1026	528	925	122	141
PFAV-P335DMJ1-F	右取付	1026	549	921	123	145
	左取付	1026	524	921	123	145

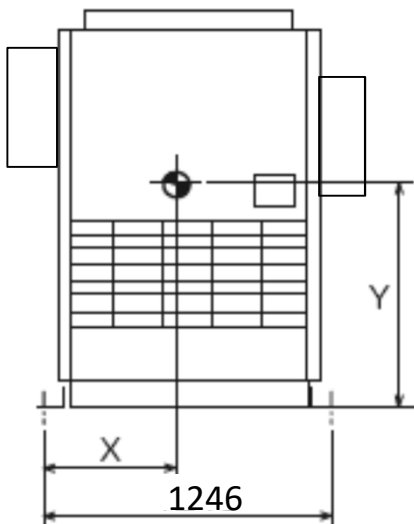

形名	箱方向	X	Y	Z	質量
PFAV-P450DMJ1	右取付	641	1109	266	243
	左取付	624	1111	268	243
PFAV-P560DMJ1	右取付	641	1109	266	243
	左取付	624	1111	268	243
PFAV-P530DMJ1-F	右取付	679	1025	267	210
	左取付	658	1027	269	210
PFAV-P670DMJ1-F	右取付	679	1025	267	210
	左取付	658	1027	269	210

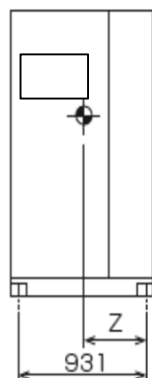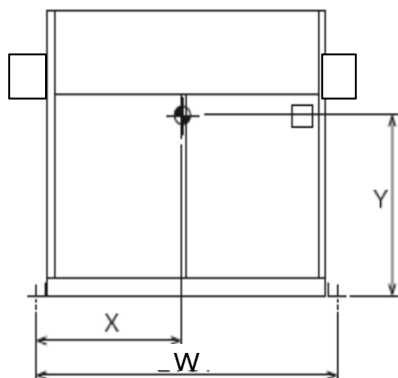

形名	箱方向	W	X	Y	Z	質量
PFAV-P670DMJ1	右取付	1806	782	975	422	421
	左取付	1806	767	975	422	421
PFAV-P800DMJ1	右取付	1806	779	982	427	427
	左取付	1806	765	982	427	427
PFAV-P1120DMJ1	右取付	1806	750	983	433	476
	左取付	1806	737	983	433	476
PFAV-P1400DMJ1	右取付	2101	990	891	488	652
	左取付	2101	980	891	488	652
PFAV-P1600DMJ1	右取付	2101	997	890	506	725
	左取付	2101	987	890	506	725
PFAV-P1000DMJ1-F	右取付	1806	751	983	433	427
	左取付	1806	737	983	433	427
PFAV-P1250DMJ1-F	右取付	1806	783	981	446	444
	左取付	1806	770	981	446	444
PFAV-P1600DMJ1-F	右取付	2101	937	960	468	507
	左取付	2101	924	960	468	507

三菱電機株式会社	作成日	18-1-26	仕様書番号	WYNB1-3790	副番	A
----------	-----	---------	-------	------------	----	---