

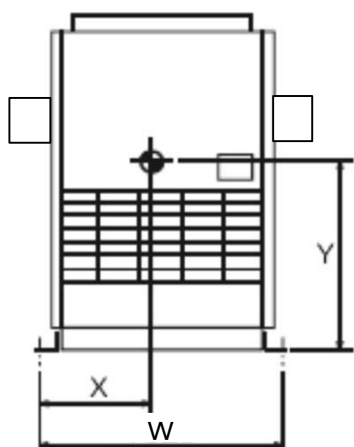




重心位置計算書  
遠方操作キット組込

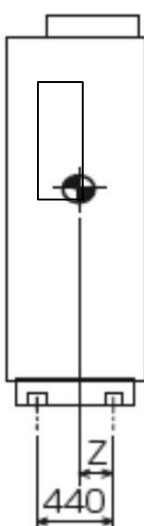

形名	箱方向	W	X	Y	Z	質量
PFAV-P80VDMJ1	右取付	806	399	910	116	139
	左取付	806	378	910	116	139
PFAV-P140VDMJ1	右取付	806	399	910	116	139
	左取付	806	378	910	116	139
PFAV-P224VDMJ1	右取付	1026	575	887	119	153
	左取付	1026	551	887	119	153
PFAV-P280VDMJ1	右取付	1026	575	885	119	157
	左取付	1026	552	885	119	157
PFAV-P167VDMJ1-F	右取付	806	399	905	118	139
	左取付	806	378	905	118	139
PFAV-P265VDMJ1-F	右取付	1026	575	881	121	155
	左取付	1026	551	881	121	155
PFAV-P335VDMJ1-F	右取付	1026	575	879	121	159
	左取付	1026	552	879	121	159

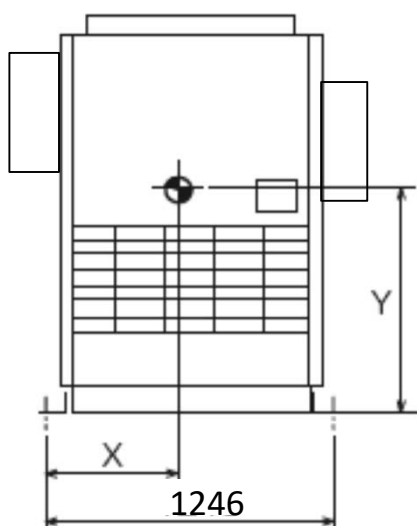

形名	箱方向	X	Y	Z	質量
PFAV-P450VDMJ1	右取付	653	1077	270	257
	左取付	636	1078	271	257
PFAV-P560VDMJ1	右取付	653	1077	270	257
	左取付	636	1078	271	257
PFAV-P530VDMJ1-F	右取付	682	996	277	224
	左取付	663	998	278	224
PFAV-P670VDMJ1-F	右取付	682	996	277	224
	左取付	663	998	278	224

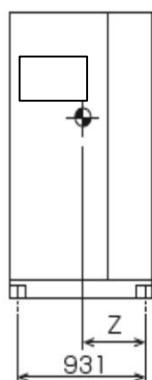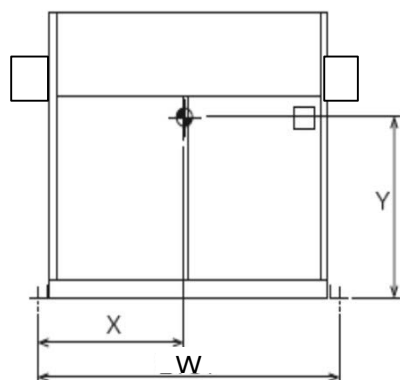

形名	箱方向	W	X	Y	Z	質量
PFAV-P670VDMJ1	右取付	1806	812	958	421	441
	左取付	1806	798	958	421	441
PFAV-P800VDMJ1	右取付	1806	809	965	426	447
	左取付	1806	796	965	426	447
PFAV-P1120VDMJ1	右取付	1806	775	976	431	499
	左取付	1806	762	976	431	499
PFAV-P1400VDMJ1	右取付	2101	1010	883	444	676
	左取付	2101	1000	883	444	676
PFAV-P1600VDMJ1	右取付	2101	1014	883	427	749
	左取付	2101	1004	883	427	749
PFAV-P1000VDMJ1-F	右取付	1806	809	965	426	447
	左取付	1806	796	965	426	447
PFAV-P1250VDMJ1-F	右取付	1806	811	966	444	464
	左取付	1806	798	966	444	464
PFAV-P1600VDMJ1-F	右取付	2101	957	951	464	527
	左取付	2101	944	951	464	527

三菱電機株式会社	作成日	2021-05-07	仕様書番号	WYNB1-5681	副番
----------	-----	------------	-------	------------	----